


Safe* Self Adhesive slick&handy Wall Hooks

- The hook flexes on impact reducing possibility of hurting. (*) That's why we call it safe. It is made of soft polyurethane (TPU) with sufficient stiffness to hold any hanging clothes (or towels, rags, cables, whatever you hang on the hooks) while the special internal structure of the hook increases its flexibility on impact.
- The hook is waterproof (the water resistance of the adhesive depends on the surface to which it is attached).
- The hook load capacity checked on the furniture surface is 1.5 kg (this value may vary depending on the surface).

Installation:

- 1 Thoroughly clean the surface. Best results can be obtained with isopropyl alcohol. Let the surface dry after that.

- 2 Remove the liner (protective film or paper).
- 3 Carefully place the hook on required position. You have to get it right the first time.
- 4 Press firmly on the flexible edges of the hook base. Nothing should stick out.
- 5 Best installation is accomplished if the temperature is between 21°C and 38°C. The hook will gain maximum strength if you let it dwell 72 hours. We recommend at least 24h until heavy loading the hook. During that time it does not require pressing.

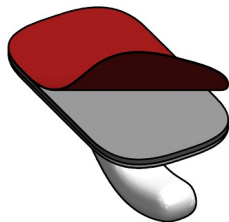

Precautions:

- 1 Keep unmounted hooks out of the reach of children.
- 2 Prior the montage store the hooks at 21°C and 50% relative humidity.